



**Rear Composite Rack Extender  
2876599**

**APPLICATION:  
2009 Sportsman XP Models**

This kit includes:

Qty	Part Description
1	Composite Rack Extender
4	M6-1.0 x 50mm carriage bolt
2	M6-1.0 x 50mm flange head bolt
4	M6-1.0 nylock nut

**IMPORTANT:** Your Polaris accessory is designed exclusively for your vehicle. Please read the instructions thoroughly before beginning. Installation of any item is easier if the vehicle is clean and free of debris.

**TOOLS REQUIRED:**


T25 Torx

10mm wrench or socket

**APPROXIMATE INSTALLATION TIME:** 15 minutes

**INSTALLATION INSTRUCTIONS:**

1. Remove the six specified rack fasteners using a T25 torx. The side fasteners have a nylock nut on the underside.

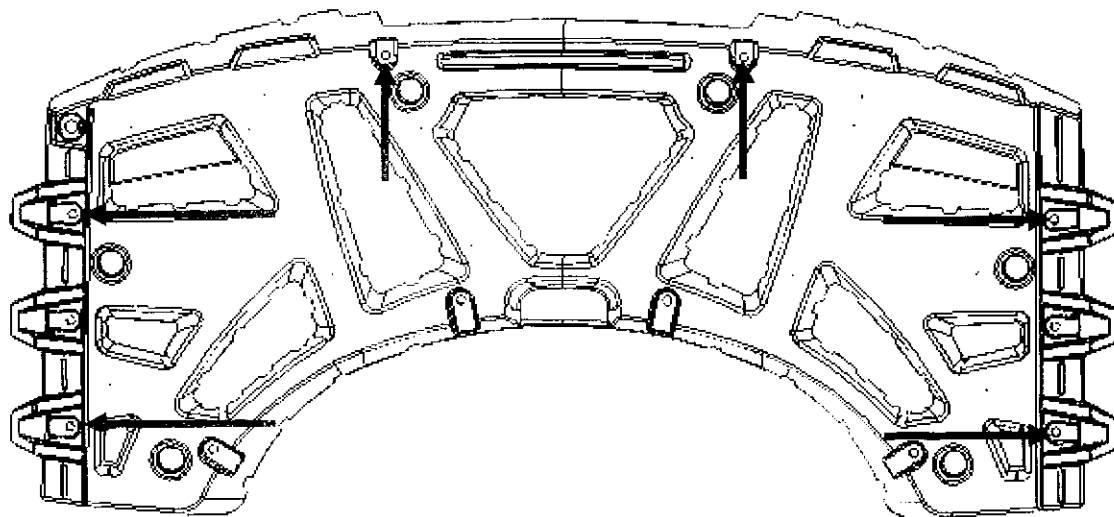

2. Place rack extender on rack.
3. Install the four (4) carriage bolts through the side supports.
4. Loosely start nylock nuts on the bottom side.
5. Install the flange head bolts through the rear support.
6. Tighten all fasteners to 5 ft-lbs.