

TUNNEL BAG KIT



P/N 2882788

APPLICATION

Verify accessory fitment at Polaris.com

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:



REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Tunnel Bag - INDY®	2687798
	1	Instructions	9927942

TOOLS REQUIRED

This kit does not require the use of any tools.

IMPORTANT


Your Tunnel Bag Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 12 minutes

INSTALLATION INSTRUCTIONS

1. Open the hook and loop fastener panels on each side of the bag as shown.

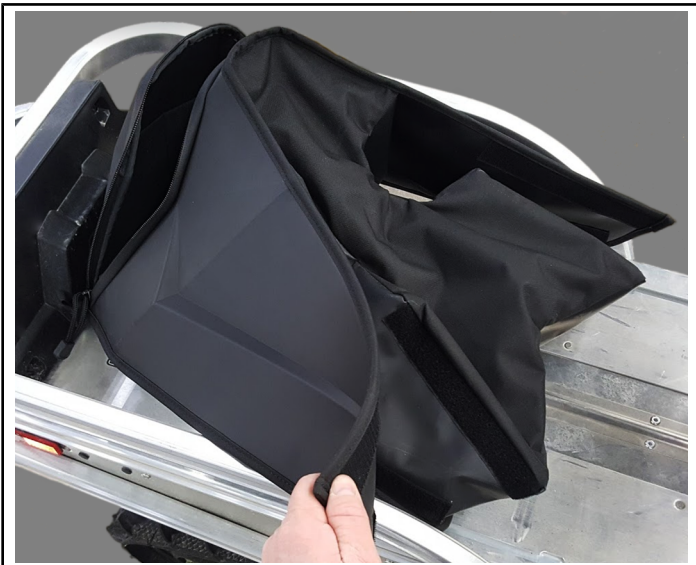

2. Fold the center section of the bag to allow it to slide through the seat support bracket.



3. Unzip the bag and push bag into place from the inside of the bag.



4. Secure the hook and loop panels back in place around the outside of the seat bracket. Bag should fit as seen below.



FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

