

X2 BACKREST CARGO RACK BAG KIT



P/N 2881966

APPLICATION

Axys Switchback 137 with Cargo Rack

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:



REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Rear Rack Bag	2687254
	1	Instructions	9927073

TOOLS REQUIRED

No tools are required.

IMPORTANT

Your X2 BACKREST CARGO RACK BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 15 minutes

INSTALLATION INSTRUCTIONS

1. Insert the smaller plastic reinforcement (A) into the back zipper compartment of the bag ① as shown. Angled corners need to face down. Zip the compartment to close it.




2. Place the larger plastic reinforcement (B) into the front wraparound zipper compartment of the bag ① as shown. Angled corners need to face down. Zip the compartment to close it.

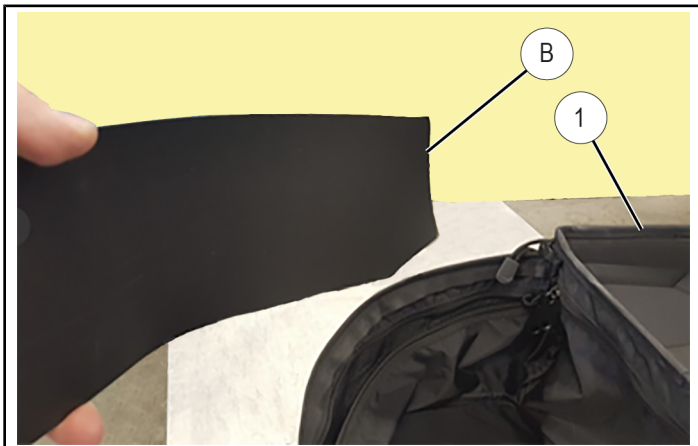

3. Place bag ① into rear rack (D) and put Velcro straps (C) through the two outside holes as shown.



4. Secure Velcro straps (C) on bottom of the rack (D) as shown.

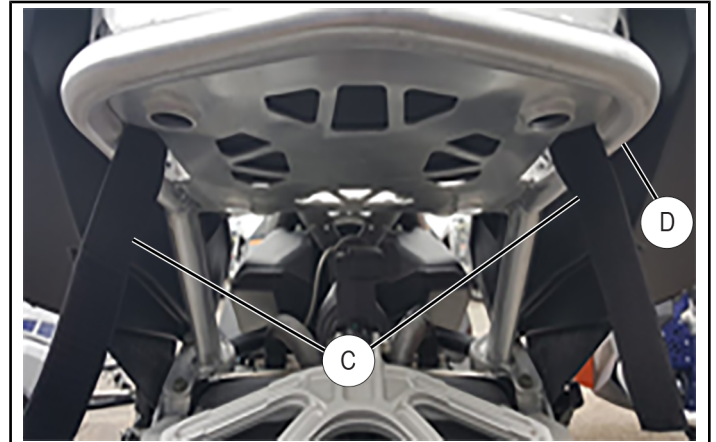

5. Secure the bag ① with two rear Velcro straps (C) around rear rack tubes as shown.

