

JOURNEY BAG KIT




P/N 2880372

APPLICATION

PRO FIT

BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

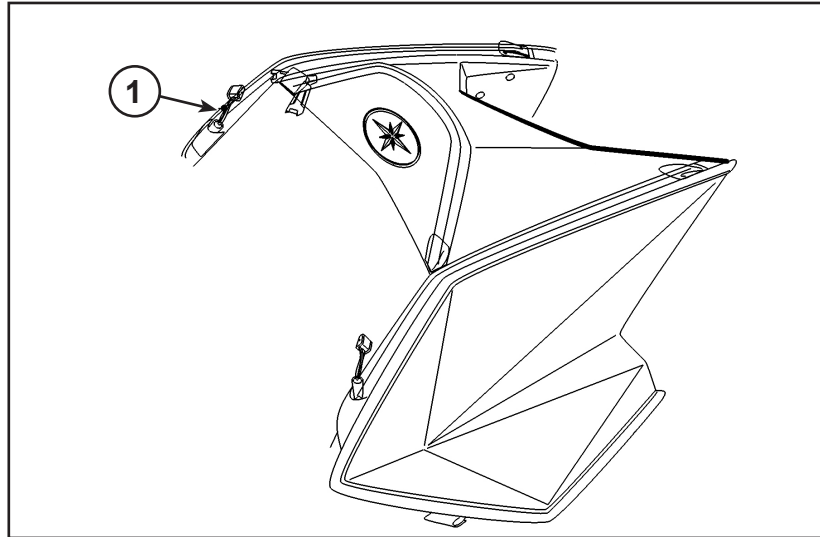

KIT CONTENTS

Ref	Qty	Part Description	Part Number
1	1	Journey Bag	2880372
	2	Rubber Feet - Carbon Rod	-
	1	19" Carbon Fiber Rod	-
	1	Instructions	9925553

TOOLS NEEDED

No Tools Required

APPROXIMATE ASSEMBLY TIME

5 mins


IMPORTANT

Your Polaris JOURNEY BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


NOTE: Do not carry sharp or pointed objects. Maximum carrying capacity 3 lbs. (13.34 N).

INSTALLATION INSTRUCTIONS

1. Place bag (1) above the cargo rack and under rear of the seat as shown in figure.

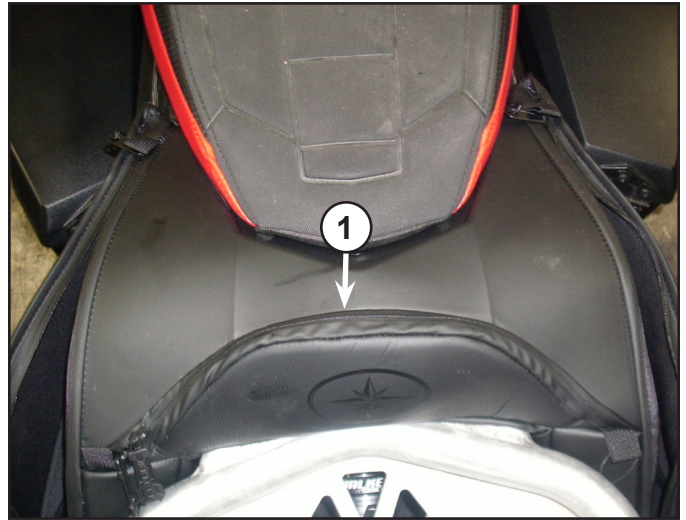

2. Fasten bag to cargo rack (A) by securing velcro straps (B) around cargo rack tube as shown in figure.

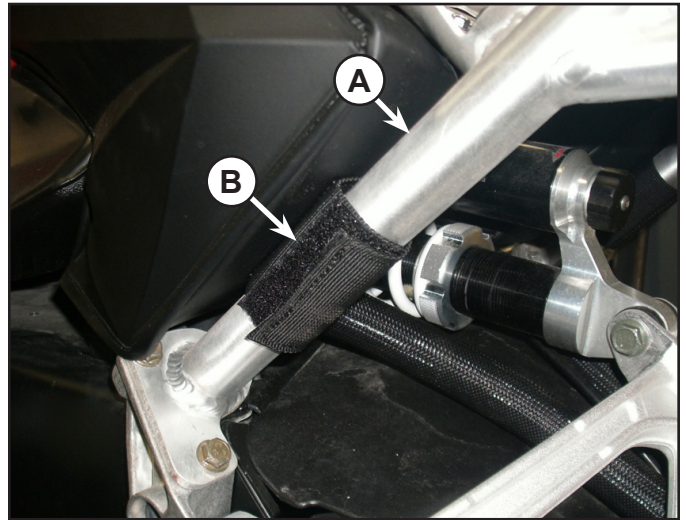

NOTE: Leave zippers open when bag is not in use to allow moisture inside to escape.